

General

Product Type	Controller
Length (mm)	178
Width (mm)	14
Height (mm)	49
Housing Color	White
Housing Material	Plastic
Weight (g)	34

Electronics

Input Domain	DC
Input Voltage	15 V DC
Output Current Max. (A)	0.008

Control

Output Signal	DALI-1
Control	DALI

Environmental

Operating Temperature	-30 ~ +55 °C	
Operating remperature	-00 ~ +00 0	

 ϵ

Disclaimer

Due to the technical evolution and improvement of our products, the data provided in this document may be updated on a regular basis, and as such, confirmation of this information is strongly recommended prior to the order process. OneEightyOne is not responsible for any discrepancies in this document following changes in our products. We reserve the right to make technical changes to our products and to change information, at its sole discretion, without notice.



oneeighty one.com

LT-424

DALI Push Switch





single group double switch, scene switch, broadcast switch.

- · PC plastic shell, small size, easy installation.
- . No external power supply, simply connected to the DALI bus.
- · Low voltage operation, safe and reliable.
- · Ordinary reset switch can achieve DALI intelligent control.
- · Applicable to home, office, hotel, supermarket etc.







Main Characteristics

· Interface Protocol: DALI (IEC62386)

· Power Supply: DALI Bus · Current: ≤8mA (static) Working Temp.: -30℃~55℃

 Mode Single address single switch


Single address double switch Single group single switch Single group double switch


Scene switch Broadcast switch

· Dimensions: L48×W28×H14(mm) · Package Size: L50×W40×H30(mm)


· Weight(G.W.): 32g

Dimensions Unit: mm

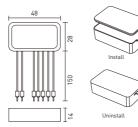

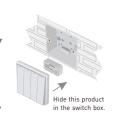

Connection

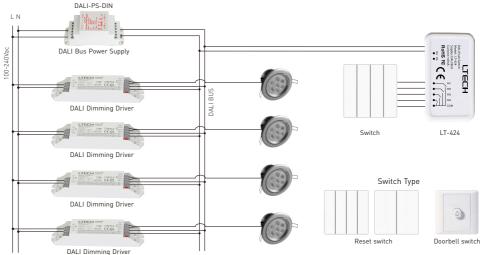

Installation

- 1. Disconnect the power supply of all devices on the DALI bus before installing.
- 2. Connect according to the above wiring diagram. DALI bus does not distinguish plus-minus polarity. Meanwhile connected to the reset switch.
- 3. Open the shell, set up the address.

Note: This product is only suitable for the reset switch. It can be Key 1, Key 2, Key 3 or Key 4.

Troubleshooting

If the switch failure occurs after pressing, please check:


1. If the connection is correct; 2. Make sure to use the reset switch;

3. Check if the DALI power output is stable.






Diagram

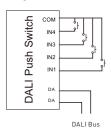



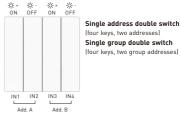

Add. A Add. B

First address is for key 1 and 2, next address is for key 3 and 4.

Short press IN1/3 is on, short press IN2/4 is off.

Long press IN2/4 to decrease brightness, long press IN2/4 to decrease brightness.

First address is for key 1, next address is for key 2......
Short press IN1/2/3/4 is on, press again is off.
Long press IN1/2/3/4 to increase brightness,
long press again to decrease brightness, as so on.
Note: no long press function for scene switch.

Add. A Add. B Add. C Add. D

Setting Method





Address value = the total value of (1-6), to get the place value when in "on" position, otherwise will be 0.

Unistall the lid and find the Dip Switch. Set address following the methods on the lid.

No.	Mode	Setting Method	
	Single address single switch	1	
1	4 keys control 4 addresses 1 2 3 4 5 6 7 8	Address 8 Address 9 Address 11 Address 12 Address 12 Address 13 Address 14 Address 15 Address 15 Address 16 Address 16 Address 17 Address 17 Address 18 Ad	
	Address mode: 0-63	Address 16 Address 17 Address 22 Address 22 Address 22 Address 24 Address 24 Address 24 Address 25 Address 26 Address 27 Address 27 Address 27 Address 27 Address 27 Address 28	
		Address 24 Address 25 Address 26 Address 28 Address 29 Address 30 Address 31 Address 31 Address 32 Address 32 Address 32 Address 30 Address 31 Address 32 Address 32 Address 30 Address 31 Address 31 Address 32 Address 32 Address 32 Address 33 Address 33 Address 34 Address 34 Address 34 Address 35 Address 36 Address 36 Address 37 Address 37 Address 38 Address 38 Address 38 Address 37 Address 38	
		23 4 6 6 7 8 2 4 6 6 7 8 2 4 6 6 7 8 7 4 6 7 8 7 4 6 7 8 7 4 6 7 8 7 4 6 7 8 7 4 6 7 8 7 4 6 7 8 7 4 6 7 8 7 4 6 7 8 7 8 7 8 7 8 7 8 7 8 7 8 7 8 7 8 7	
2	Single address double switch 4 keys control 2 addresses	Address 40 Address 41 Address 42 Address 43 Address 44 Address 45 Address 46 Address 47	
_	Address mode: 0-63	Address 48 Address 49 Address 50 Address 51 Address 52 Address 53 Address 54 Address 55	
		Address 56 Address 57 Address 58 Address 59 Address 60 Address 61 Address 62 Address 63	
	Single group single switch		
3	4 keys control 4 group addresses Group mode: 0-15	\$\begin{array}{cccccccccccccccccccccccccccccccccccc	
4	Single group double switch 4 keys control 2 group addresses Group mode: 0-15	Group 0 Group 1 Group 2 Group 3 Group 4 Group 5 Group 6 Group 7	
	Scene switch 4 keys control	5828 5828 5828 5828 5828 5828 5828 5828	
5	4 scenes 1 2 3 4 5 6 7 8 Scene mode: 0-15	Scene 8 Scene 9 Scene 10 Scene 11 Scene 12 Scene 13 Scene 14 Scene 15	
6	Broadcast switch Any key can control ON/OFF and 12 3 4 5 6 7 8 dimming of all addresses.	_	
		O II I I I I I I I I I I I I I I I I I	